



How to set the Time

2.3 SETTING THE TIME AND WEEKDAY

You will only have to do this if the background (or reference) time and day settings are not correct. Check this by turning on the Batt-Latch by pressing any key, and checking the display for the day and time.

If you need to adjust the time and day, follow the instructions below. Once you set the time you should not have to set it again (except for daylight saving twice a year) but it is advisable to check the settings are correct every now and then.

Press and hold the **CLOCK** key for 3 seconds to enter clock setup mode: while beeping the display will show [**SET CLOCK**], give a higher pitched beep, then display the currently set time, such as the example below:

[SET: MON 8:20AM]

The correct day and time can be set by pressing the **DAY**, **HOURL** and **MIN** keys. You can only move *forward* in days or numbers on each key. Use one press, or hold the key down for faster input, especially on the **MIN** key. Make sure you have the **AM/PM** setting correct on the **HOURL** key.

When you have finished entering the corrected day and time, you need to press the **ENTER** key to exit from clock setup mode. The new background time will be displayed briefly, and saved.

A note on daylight saving: It won't update automatically, so you will need to change the clock, as above, to adjust for daylight saving time.

Refer to the Batt-Latch User Manual: <https://www.novel.co.nz/files/BLmanual2021>



Novel Ways Limited

Unit 3 / 6 Ashwood Avenue, PO Box 2340, **Taupō 3330** New Zealand
Phone 0800 003 003 • +64 7 376 5658 • Email enquiries@novel.co.nz
www.novel.co.nz